




Modell PGU1S, PHU1S, PMGU1S

Montageanleitung
Installation Manual




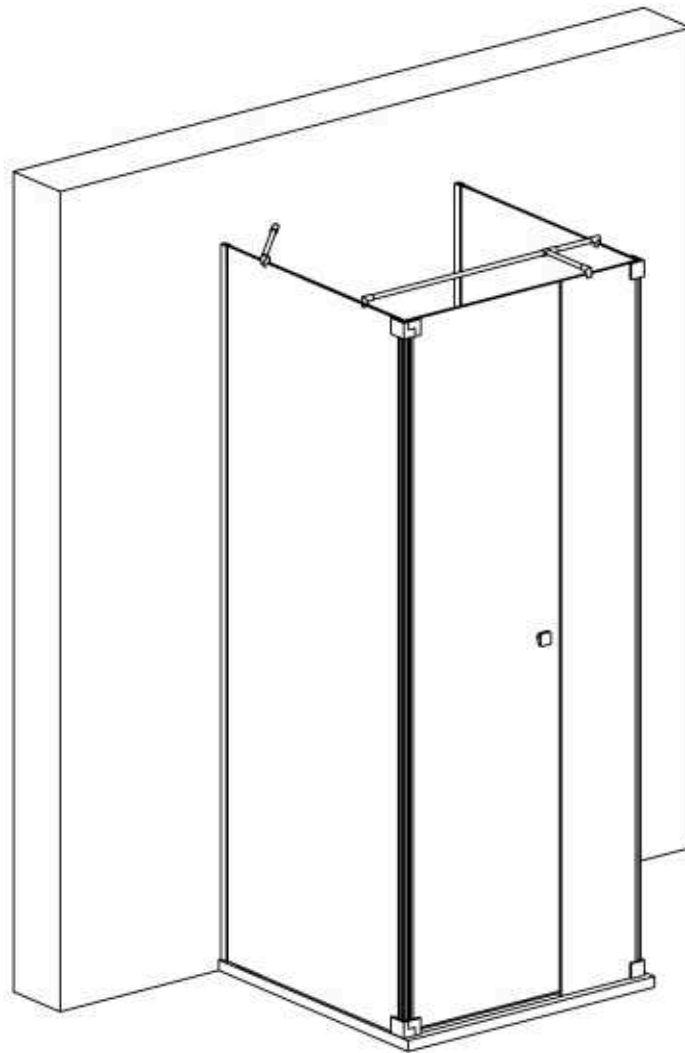





3-Seiten U-Duschkabine
U-shaped shower enclosure
Links / Left


| | | | | | | | | |
|--------------|---|------------|---|----------|---|---|---|---|
| 1 x G/EGS-LO |  | 1 x G2/G2H |  | 8 x G100 |  | 8 x  | 6 x C2 |  |
| 1 x G/EGS-LU |  | 1 x G3/G3H |  | 8 x G300 |  | 8 x  | 2 x G/SUP40 |  |
| 2 x G/EL |  | 1 x G8/G8H |  | 1 x G400 |  | 8 x  | 1 x G/SUL120 |  |
| 2 x P/WKP |  | 1 x G9/G9H |  | 8 x d |  | 1 x  | 2 x  | |
| | | 1 x G10 |  | | | 1 x  | | |

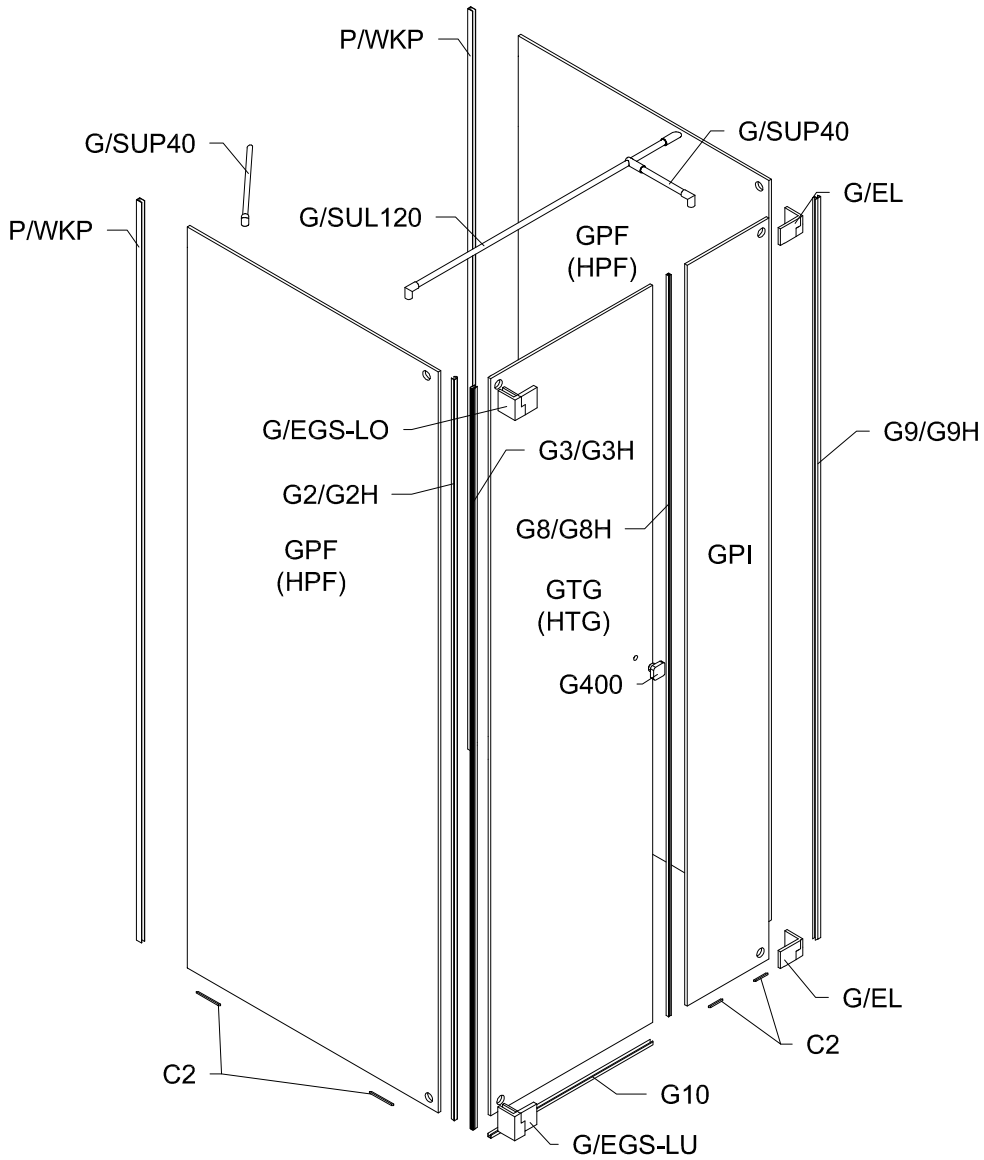






Vormontage von Dichtprofilen und Beschlägen Pre-assembly of gaskets and fittings.

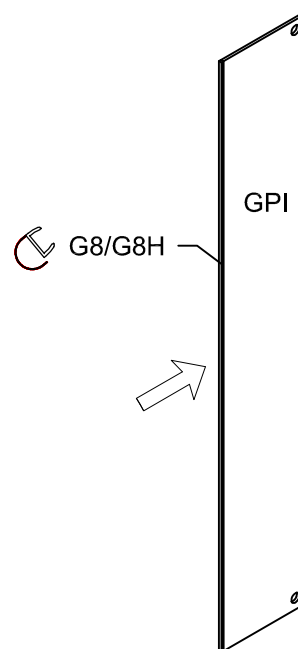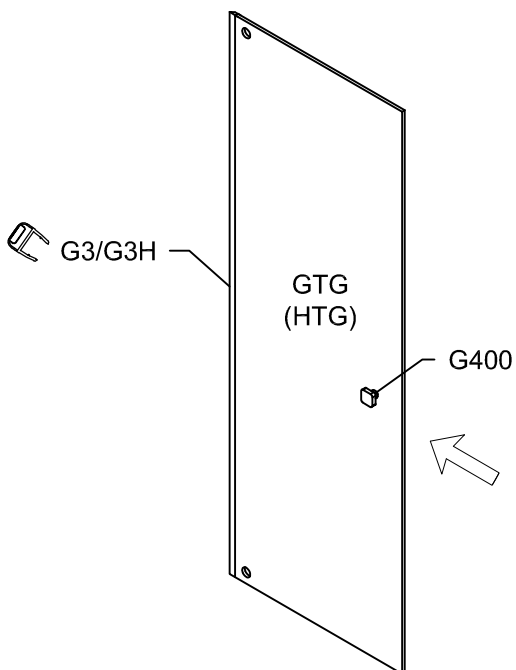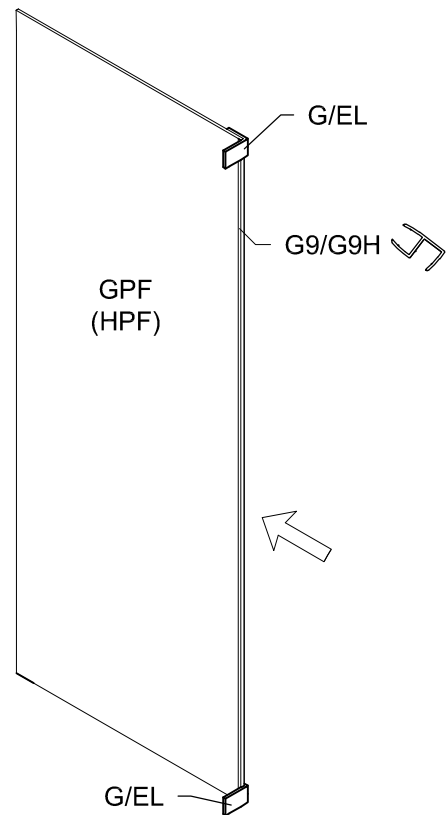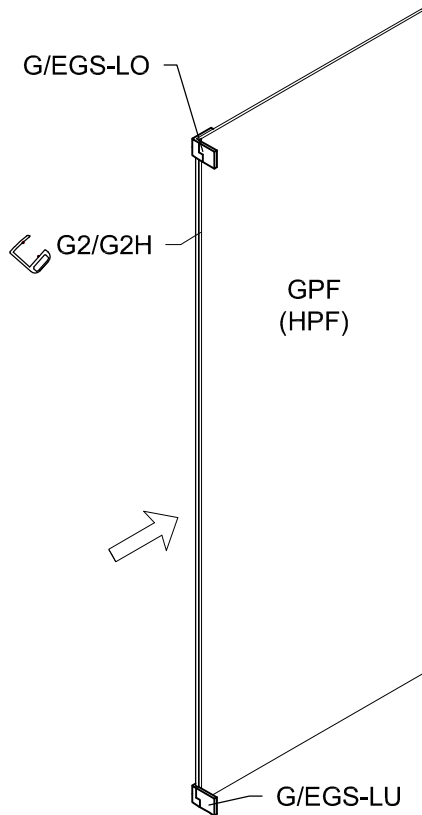


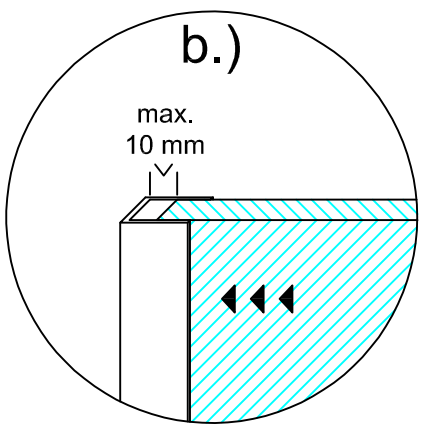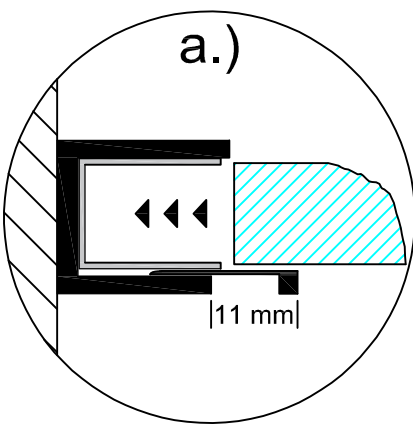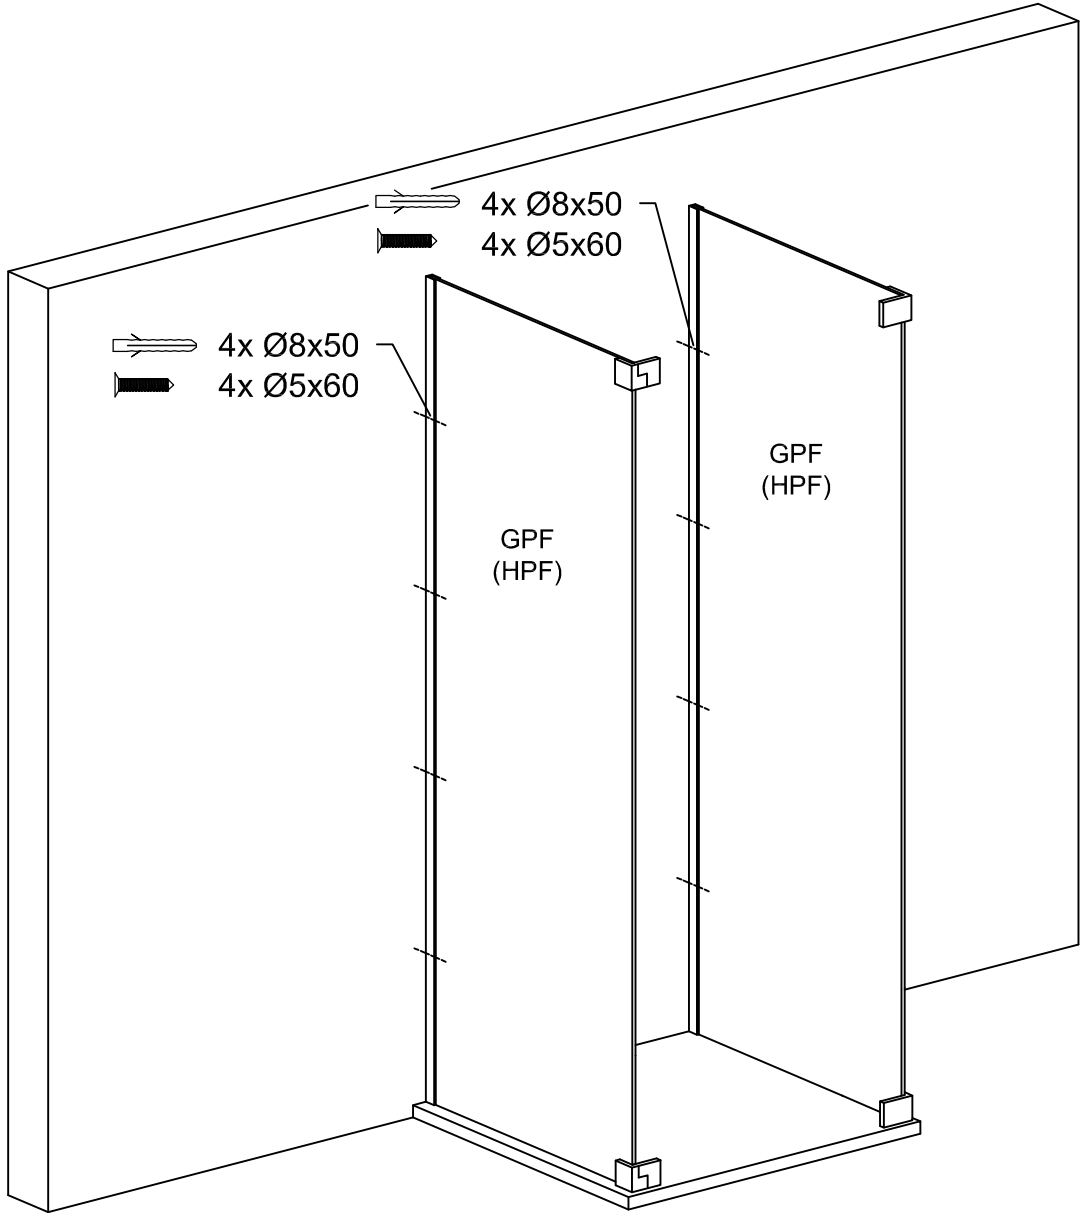

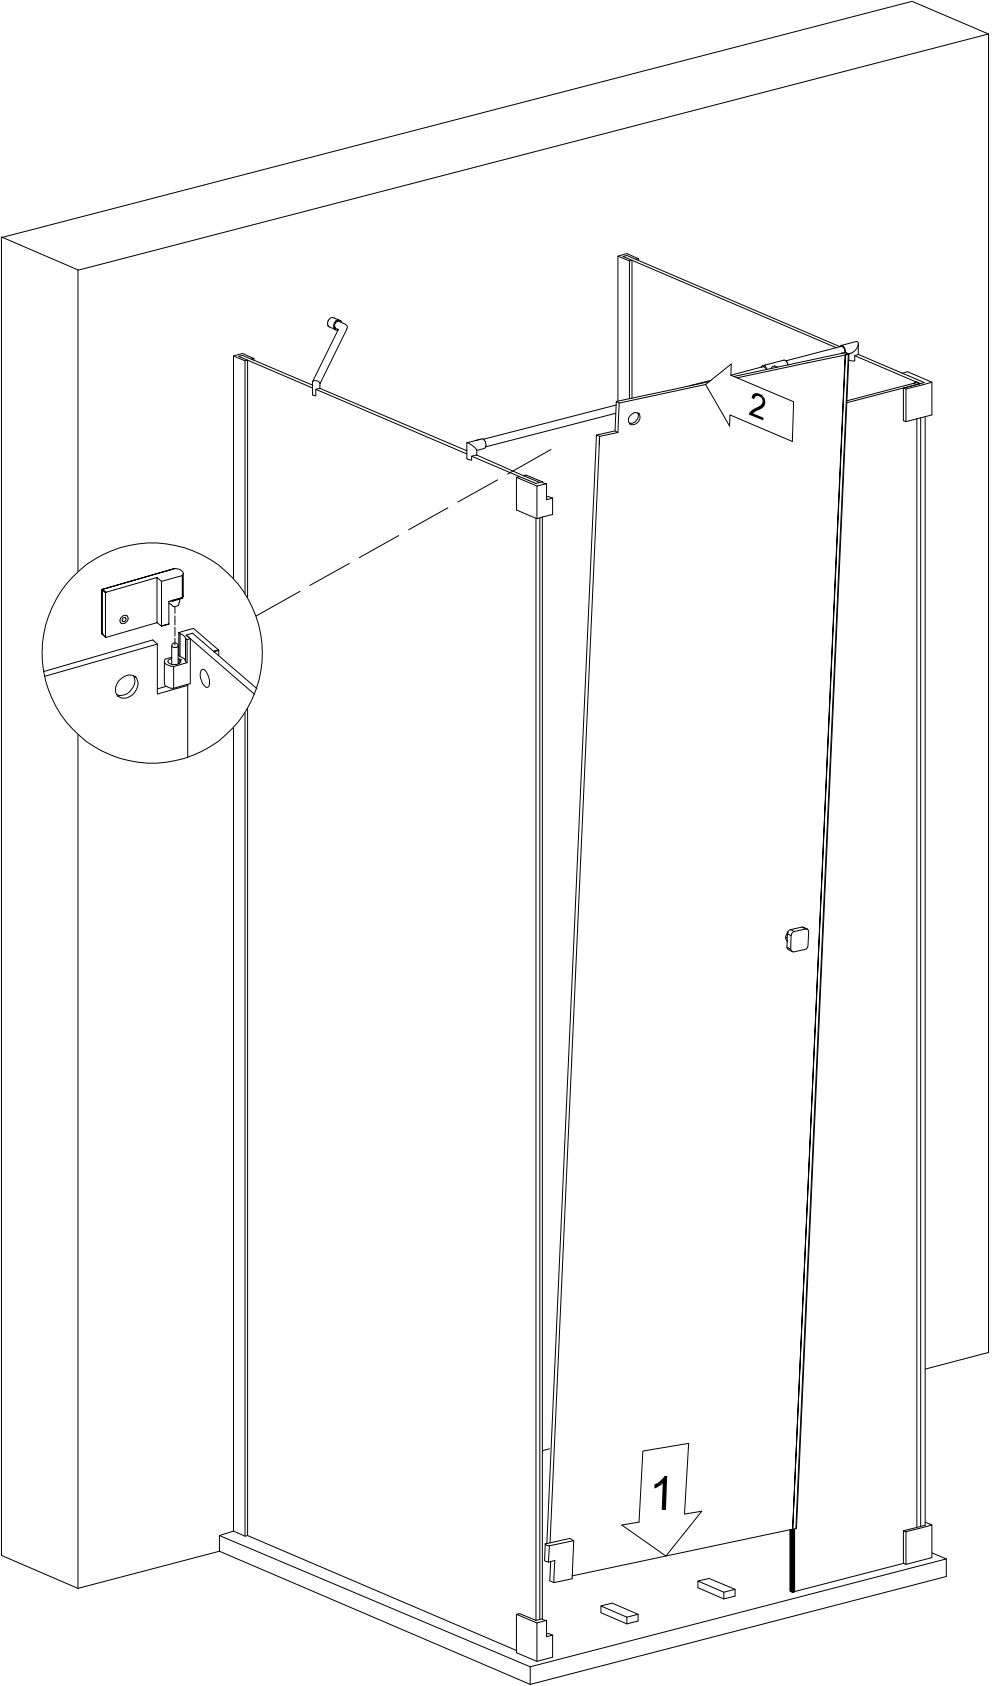


Wieder öffnen:
Open again:
Per riaprire:
Ouvrir à nouveau:

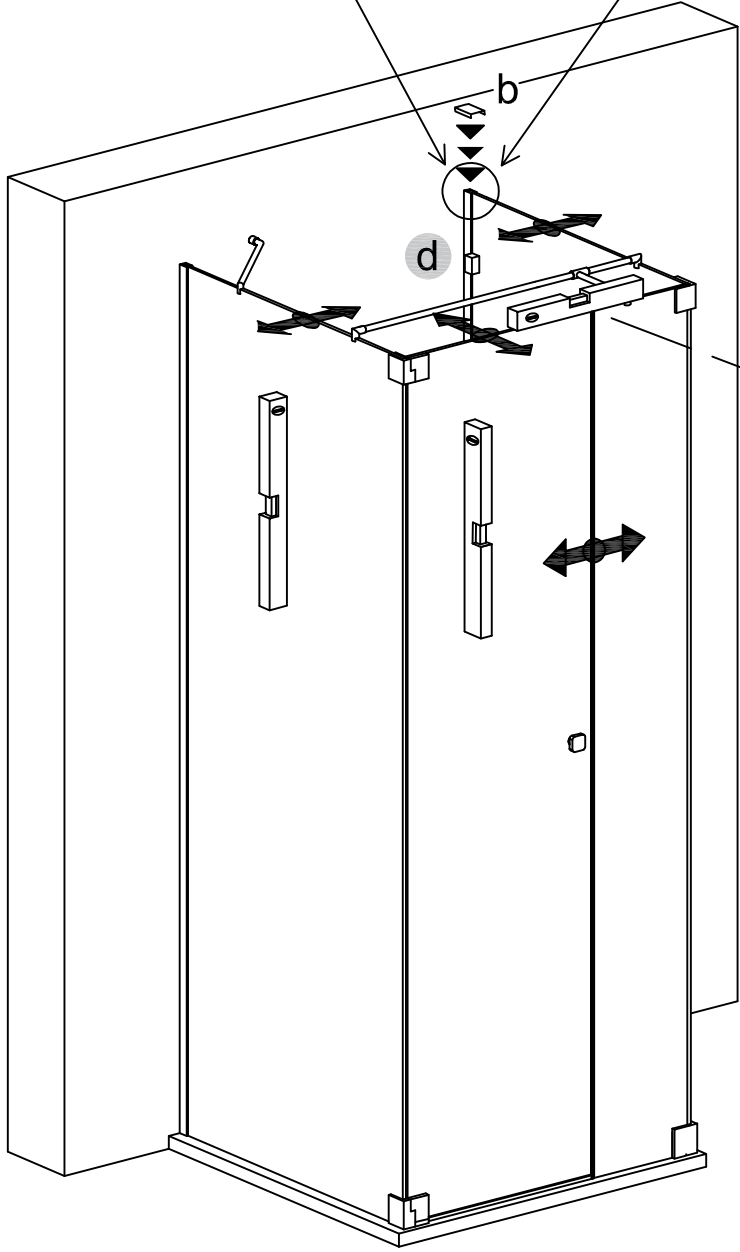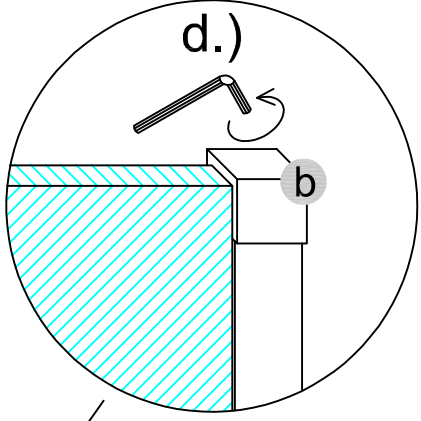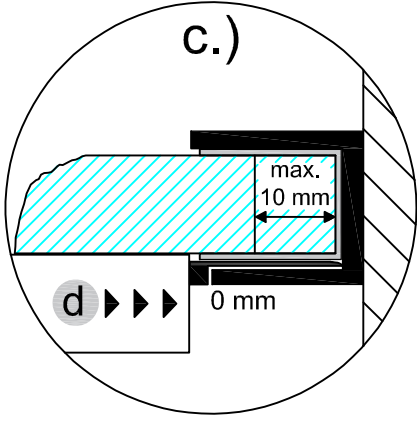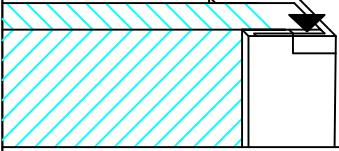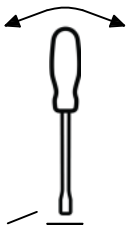

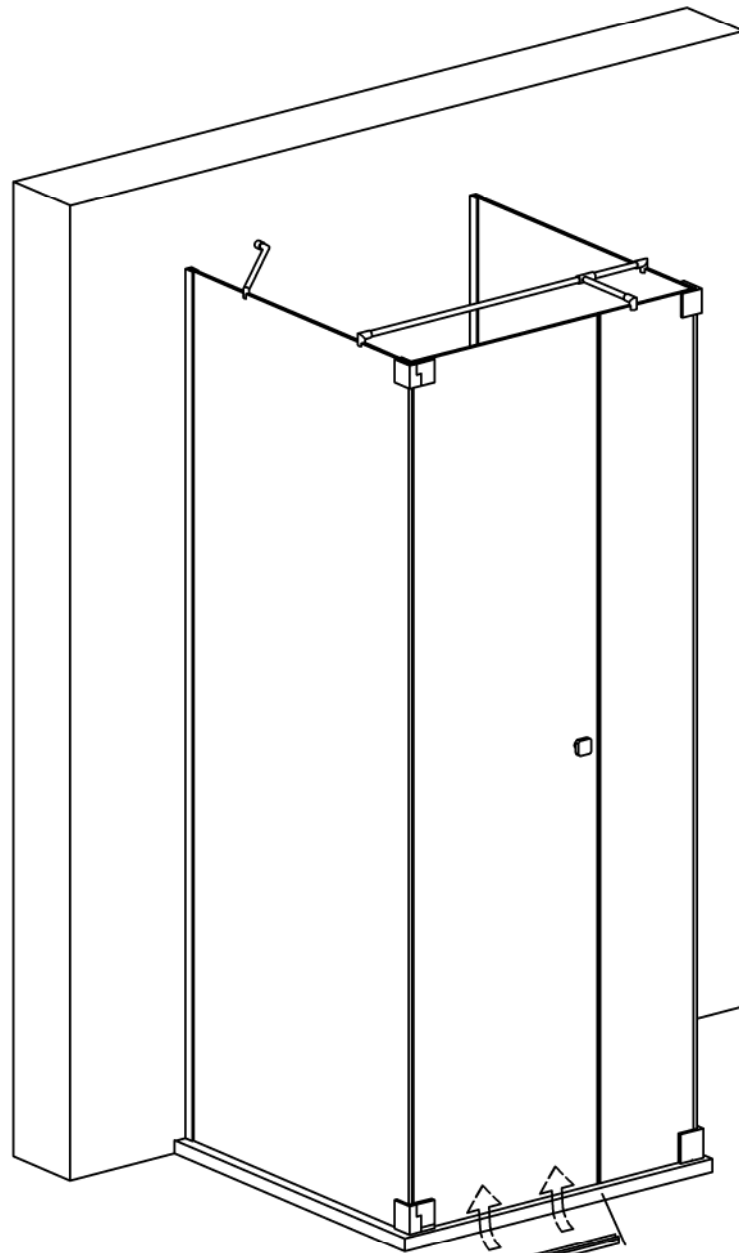

G10

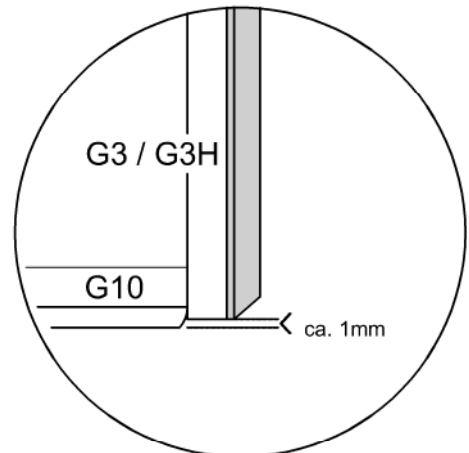

G3 / G3H

G10

ca. 1mm

